


MacBook Air (13-inch, 2021) Ledge Adapter




SKU:MBALDG03

Assembly Instructions


- 1** REMOVE SCREW ON THE RIGHT SIDE OF THE LAPTOP USING SCREWDRIVER PROVIDED

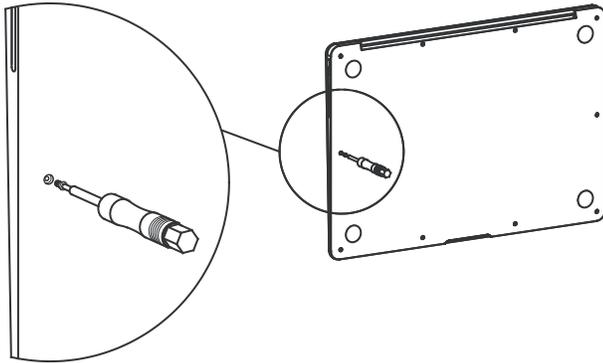

- 2** INSTALL LEDGE WHILE THE **LAPTOP'S LID IS OPEN** WITH THE SCREW PROVIDED

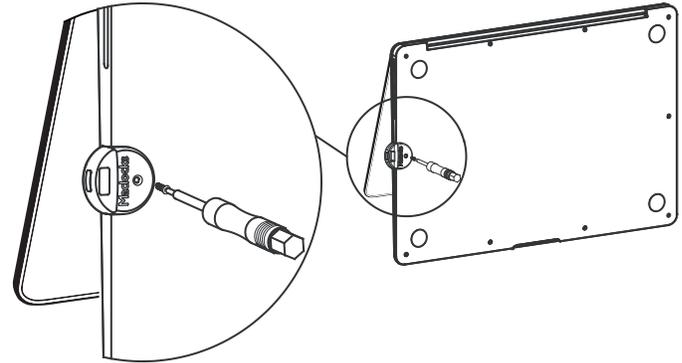


IN THE BOX



Screwdriver




Attachment Screws
(Only one screw is required)

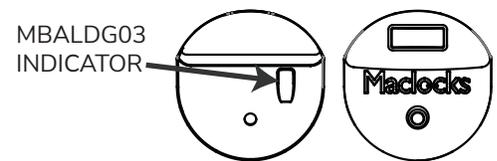

Ledge


MacBook Air (13-inch, 2021) Ledge Adapter




SKU:MBALDG03

Assembly Instructions

- 1** REMOVE SCREW ON THE RIGHT SIDE OF THE LAPTOP USING SCREWDRIVER PROVIDED

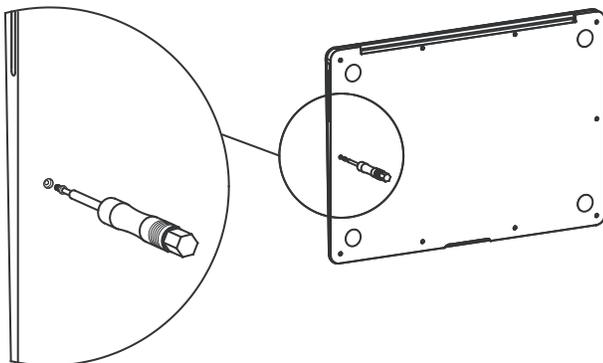

- 2** INSTALL LEDGE WHILE THE **LAPTOP'S LID IS OPEN** WITH THE SCREW PROVIDED

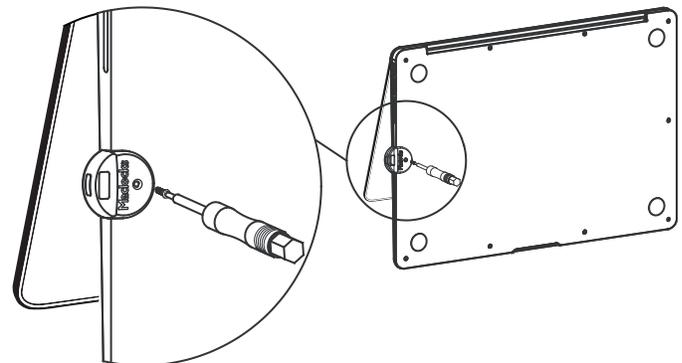


IN THE BOX



Screwdriver



Attachment Screws
(Only one screw is required)

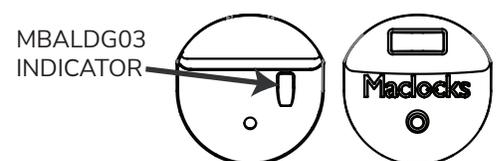

Ledge


MacBook Pro (14-inch, 2021) Ledge Adapter




SKU:MBPR14LDG01

Assembly Instructions


1

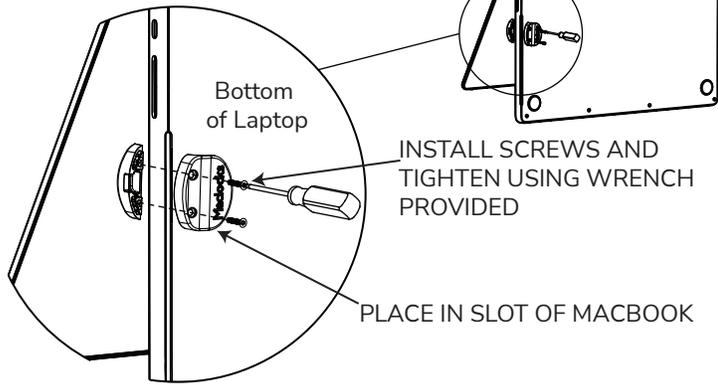

2

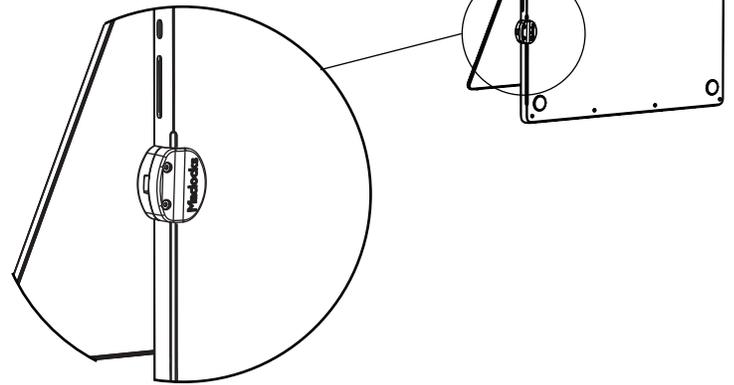



IN THE BOX



Torx driver T-7



Attachment Screws
(Only two screws are required)

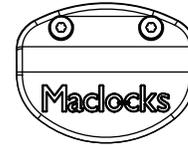

Ledge two parts


MacBook Pro (14-inch, 2021) Ledge Adapter




SKU:MBPR14LDG01

Assembly Instructions


1

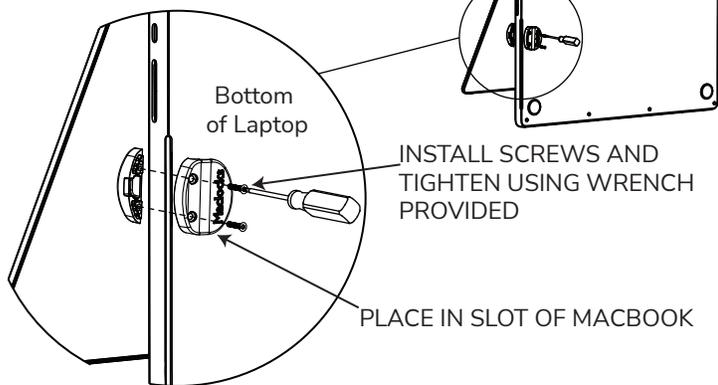

2

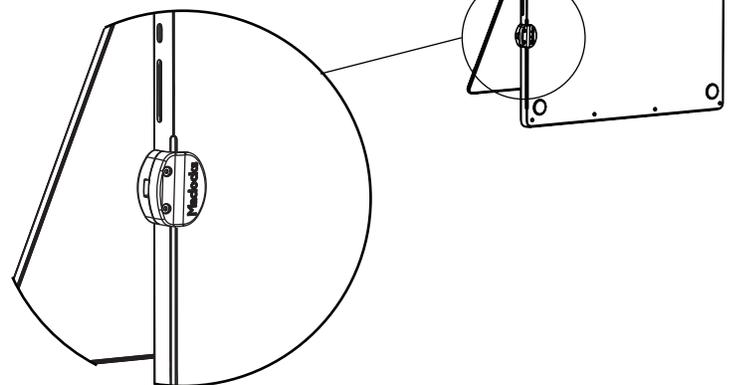



IN THE BOX



Torx driver T-7



Attachment Screws
(Only two screws are required)

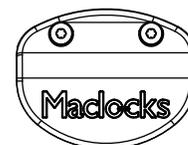

Ledge two parts


MacBook Pro (16-inch, 2021) Ledge Adapter




SKU:MBPR16LDG02

Assembly Instructions


1

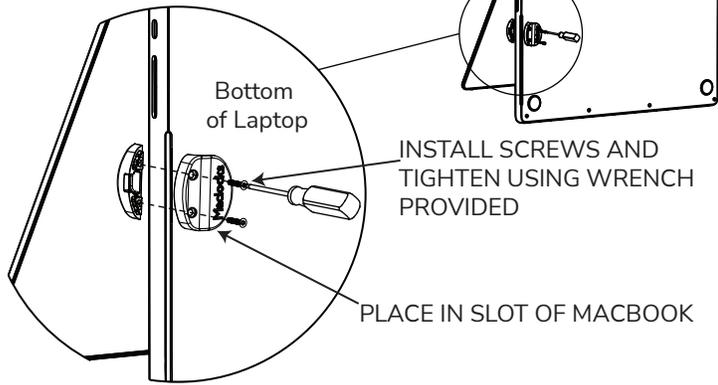

2

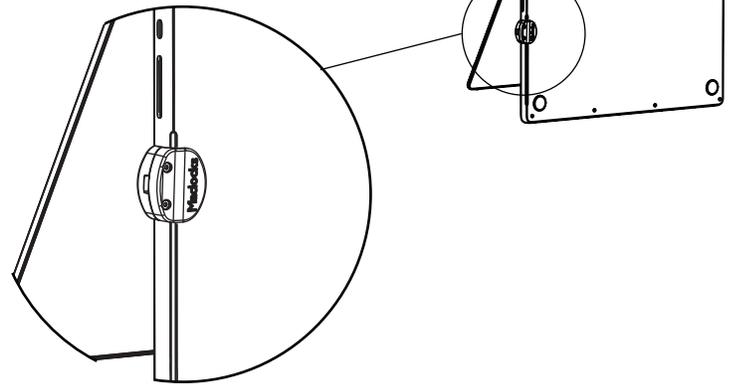



IN THE BOX



Torx driver T-7



Attachment Screws
(Only two screws are required)

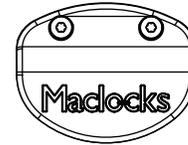

Ledge two parts


MacBook Pro (16-inch, 2021) Ledge Adapter




SKU:MBPR16LDG02

Assembly Instructions


1

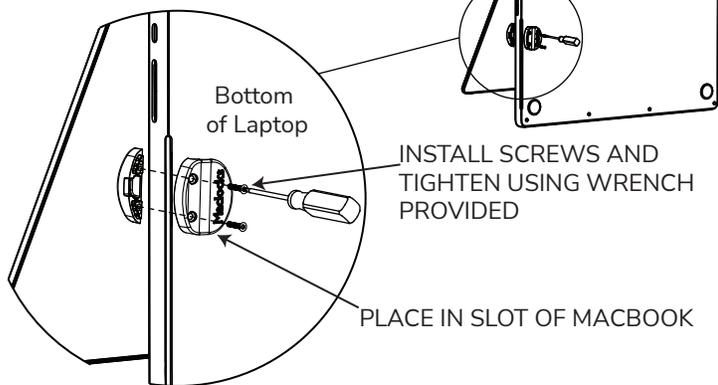

2

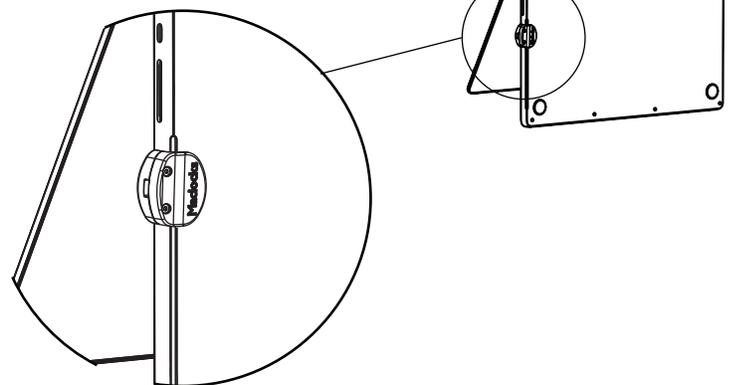



IN THE BOX



Torx driver T-7



Attachment Screws
(Only two screws are required)

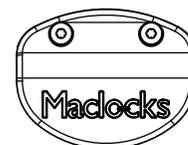


Ledge two parts

Universal Ledge Security Lock Adapter


SKU: UNVMBPRLDG01

Assembly Instructions

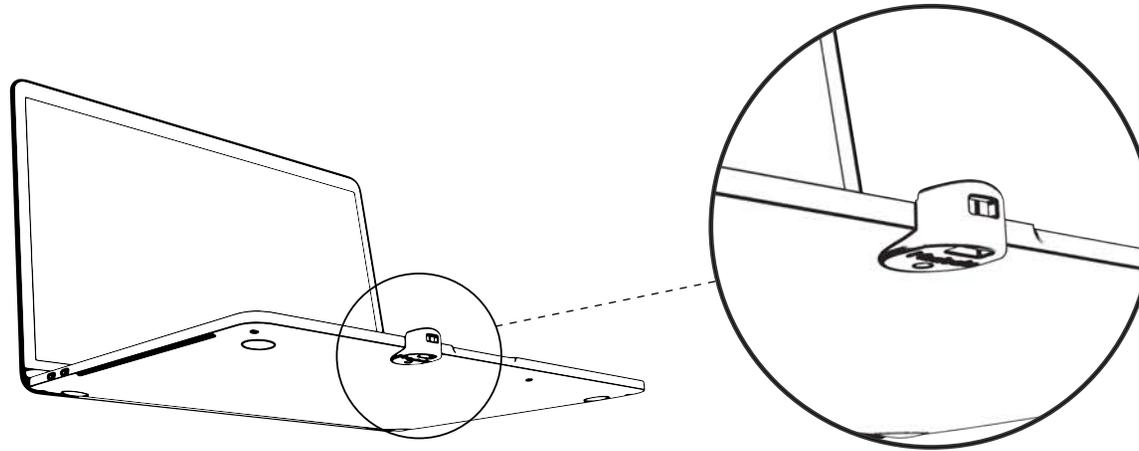


1

REMOVE ONE OF THE TWO FRONTAL SCREWS

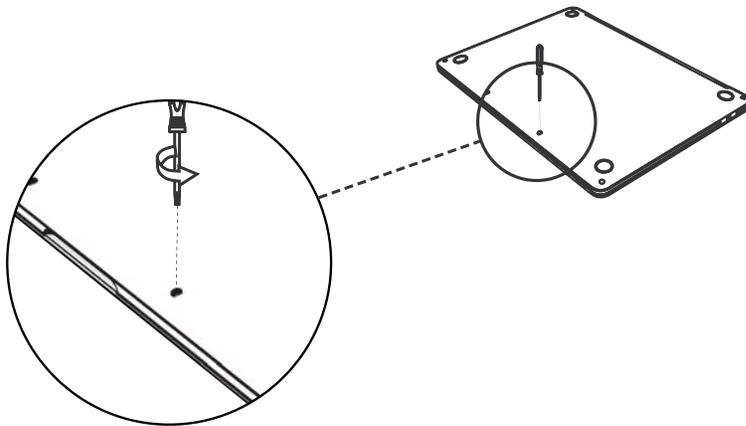

2

ALIGN THE "LEDGE" WITH THE SCREW HOLE AND FASTEN WITH SUPPLIED SCREW

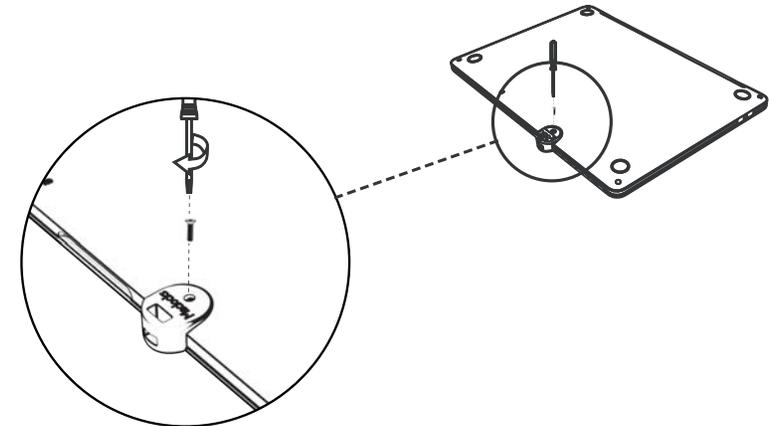

IN THE BOX



Screwdriver



Fastening Screws



"Ledge" Lock Slot Adapter