




1

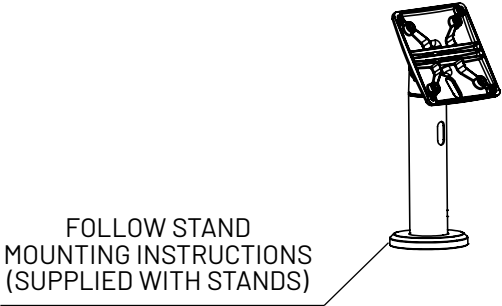


Or

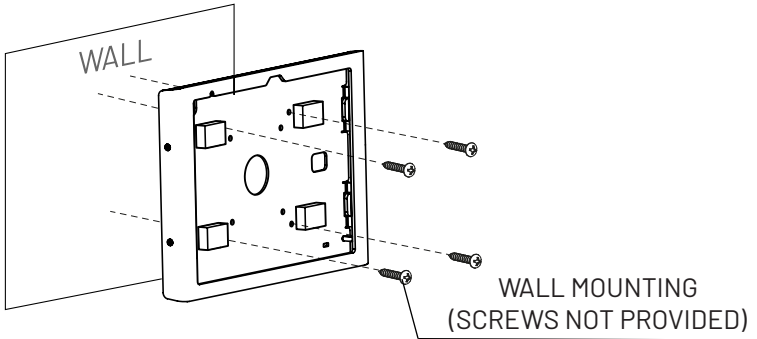


2

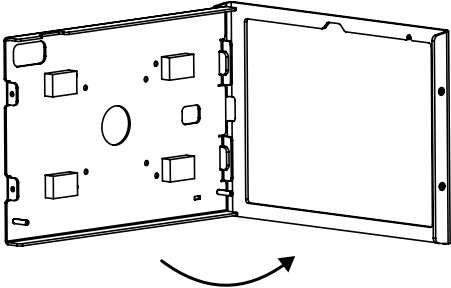


3

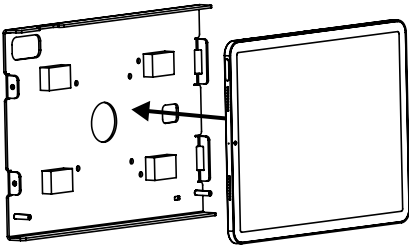


4

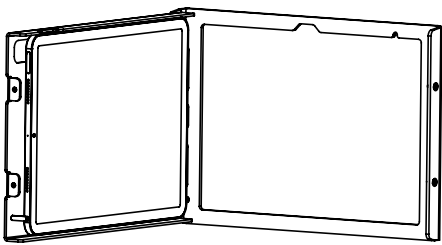


5

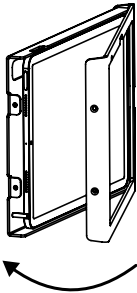

6

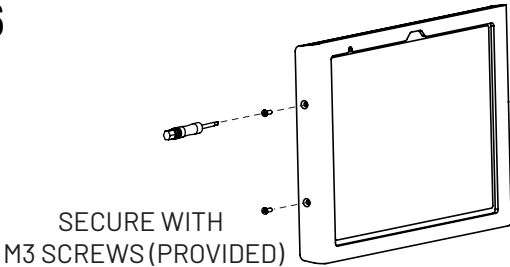

7

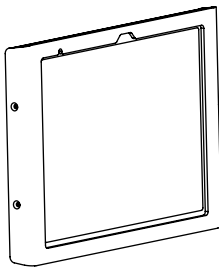


IN THE BOX



Torx Screwdriver




M3x10mm tamper proof screws

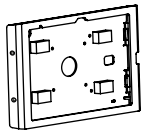

Swell enclosure


1

TIGHTEN VESA MOUNTING  
PLATE AT 90°

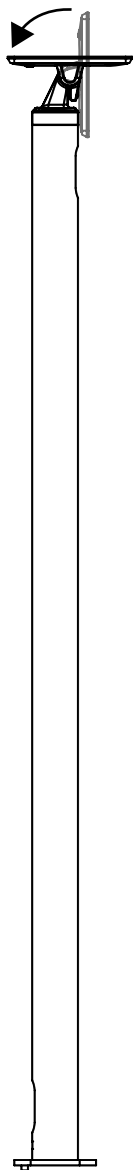


2

TURN STAND ONTO VESA  
MOUNTING PLATE AND PLACE ON FLAT SURFACE.  
PLACE BOTTOM PLATE  
AND ALIGN WITH HOLE USING LOCATOR PIN

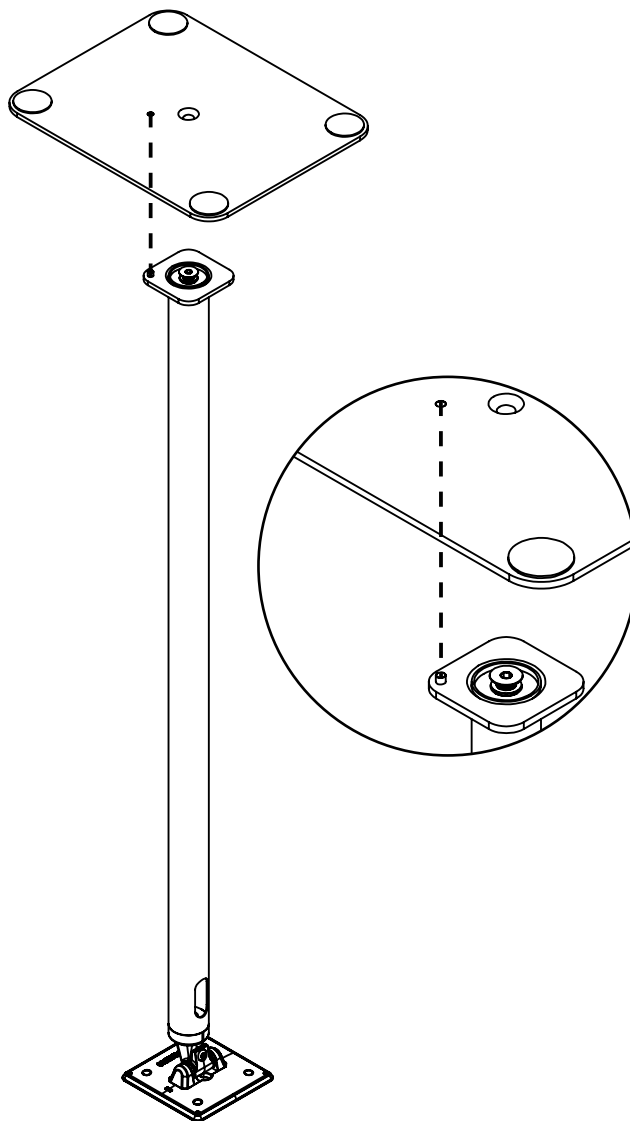

3


INSTALL THE BOTTOM PLATE USING M10 X 25mm  
CONICAL ALLEN SCREW (PROVIDED)  
AND 6mm ALLEN WRENCH (PROVIDED)

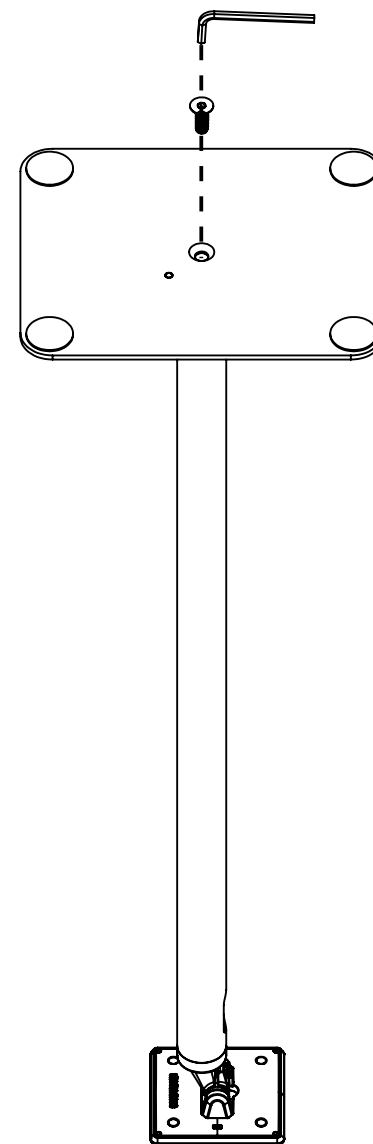


4 Free Standing or Floor Mounting

5


REMOVE RUBBER PLUGS

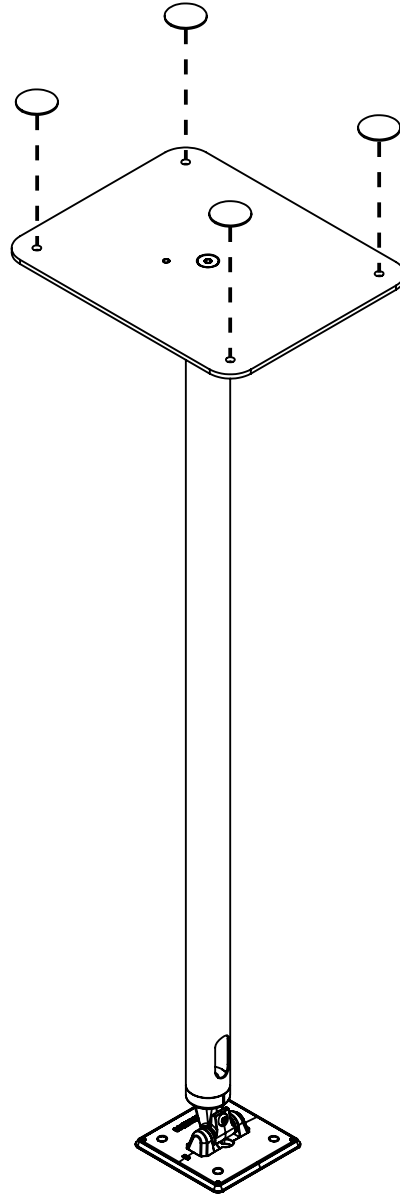

SCREW BOTTOM PLATE TO THE FLOOR  
(SCREWS NOT PROVIDED)

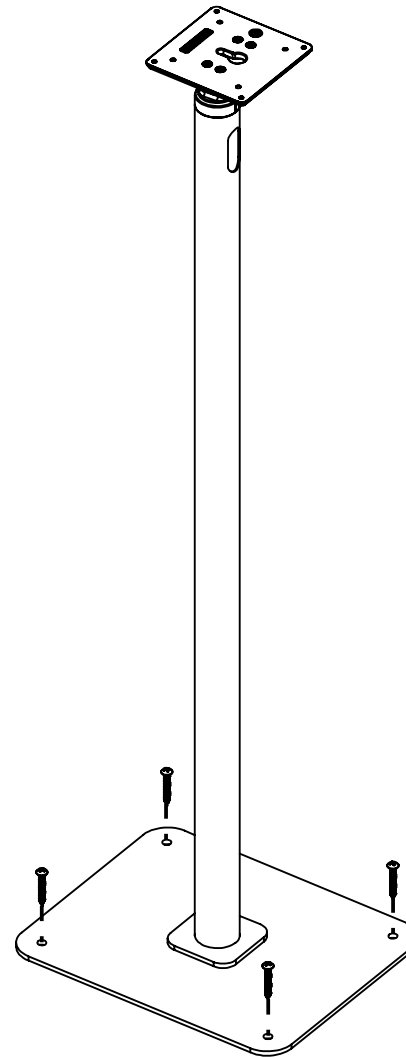

ROUTE CHARGING CABLE  
THROUGH THE STAND AS SHOWN

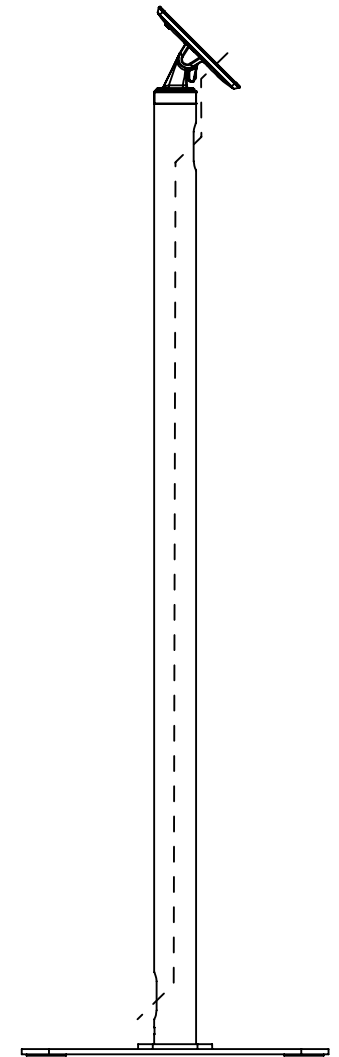

- 6


INSTALL ENCLOSURE/VESA MOUNT  
TO STAND USING M4 X 8mm  
PHILLIPS PAN HEAD SCREWS (PROVIDED)
- 7


INSTALL THE ENCLOSURE TOP  
PLATE/VESA MOUNT PER  
THEIR INSTRUCTIONS

Tilt Tension  
Adjustments

In The Box

ADJUST HINGE  
TENSION USING  
T30 TORX  
L-WRENCH  
(PROVIDED)


- 

M4 X 8mm  
Phillips Pan Head  
Screws
- 


T30 TORX L-Wrench

- 


M10 X 25mm  
Conical Allen  
Screw

- 

6mm Allen Wrench

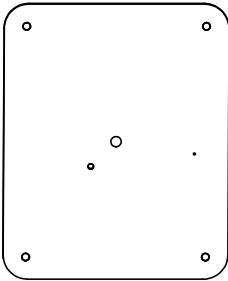

Bottom Plate



Swift Pole